

Suntube-2 Rigid Panel Solar

CARE & MAINTENANCE GUIDE

Suntube-2 Rigid Panel Solar requires care and maintenance to achieve maximum life and to uphold the warranty. The following are recommended maintenance steps:

1. Conduct regular visual inspections of plumbing around pump and pipework to ensure no leaks.
2. If you are able to, conduct a visual check of the system on your roof. If you are unable to do this, then while the system is running you can listen to the down pipe closest to the pool heating. If it's a nice sunny day with no rain then you should not be able to hear any water trickling down the pipes.
3. Ensure any leaks on the roof are dealt with urgently to avoid damage on your roof from corrosion/rust from the pool water.
4. Check the system while running to ensure there are no big bubbles (bubbles upon initial start up is normal as the system purges).
5. Check that there are no error codes on the controller, if there is an error please refer to the user guide for troubleshooting.
6. It is critical for EPDM rubber systems to be placed into Winter Mode after the swimming system, this is less critical for PVC systems like our Suntube-2 Rigid Panel.
7. For solar pool heating systems that have an independent pump and are not connected to the filtration system, ensure to frequently clean out the solar pump lint basket.
8. If a drain off valve is installed on your system, please be mindful that your system needs to be drained at the end of the swimming season and Winter Mode switched off so your system does not run.

Sunbather

SOLAR
POOL HEATING
& COVERS

 **1800 228 437**

Head Office: 2174 Frankston-Flinders Road, Hastings 3915 VIC
QLD Office: 25 Industrial Crescent, Willawong 4110 QLD
NSW Office: Unit 5, 6 Gladstone Road, Castle Hill 2154 NSW