

Coverroll Ground Roller - Operation Guide

Putting the cover on the pool

- Remove security strap from around the cover and clip around the leg of the roller for safe keeping.
- Ensure both drop pins are in place to secure the roller (if you have purchased a upgrade kit).
- Pick up the haul cord and walk to the other end of the pool.
- Pull the cover onto the pool.
- Put the haul cord on top of the end of the cover.

Removing the cover from the pool

- Wind the crank handle to begin winding up the cover. Note if there is a hinge section you need to fold the hinged piece onto the main cover and then under roll not over roll (winding crank handle clockwise to “over roll” and anti-clockwise to “under roll” cover)
- Once the cover is completely on the roller, fasten the security strap around the cover to stop it from unwinding/self shedding.

Note: As this roller does not have drop pins or lockable castor wheels to fix it's location during operation, please take care in slowing pulling the cover on and off the pool.

In cases of strong winds and inclement weather please ensure your cover is off the pool and secured on the roller.

