Coveroll Motorised Wall Roller - Operation Guide



Note: User will identify on site that up and down arrows will change depending on orientation (left or right hand motor)

In all circumstances should you feel the cover getting away from you, hit the "my" button to stop the cover.

Putting the cover on the pool

- Remove security strap from around the cover and set the security strap to the side.
- Pick up the haul cord and walk to the other end of the pool.
- Press the appropriate button to deploy cover. Do not apply excess tension on the rope the motor must be allowed to shed the cover at its own pace. The operator is only required to pull the cover onto the pool at the same rate the motor is shedding the cover from the roller.
- The roller will automatically stop when the cover is fully deployed. If you cover stops short, refer to 'Resetting Limits' below.
- Put the haul cord on top of the end of the cover.

Removing the cover from the pool

- Lift the trailing end of the cover onto the concourse to allow the cover to move smoothly up onto the roller.
- Position yourself at the opposite end of the pool with the remote in your hand.
- Press the Up button on the remote and watch as the cover automatically retracts off the pool onto the roller. If you cover stops short, refer to 'Resetting Limits' below.
- · Fasten the security strap around the cover to stop it from unwinding.

Note: In cases of strong winds and inclement weather please ensure your cover is off the pool and secured on the roller.



sbtradesupport.au@fluidra.com | sunbather.com.au

