

Downunder Manual Roller - Operation Guide

Putting the cover on the pool

- Open the lid using the center hole in the lid.
- Pick up the haul cord and pool the cover up to waist height so you have approx. 1 metre up and out of the Downunder, then lay on the concourse then walk to the other end of the pool and start deployment.
- Pull the cover onto the pool.
- Put the haul cord on top of the end of the cover.
- Removing cover from the pool.

Removing the cover from the pool

- Remove handle from inside the lid.
- Insert the handle into the top of the gear drive.
- Lift the trailing end of the cover onto the concourse to allow the cover to move smoothly into the Downunder.
- Wind the handle to begin winding up the cover.
- Once the cover is completely on the roller, remove handle and store safely back inside the lid.
- Close lid.

Note: In cases of strong winds and inclement weather please ensure your cover is off the pool and secured on the roller.

