

Downunder Motorised Roller - Operation Guide



Note: User will identify on site that up and down arrows will change depending on orientation (left or right hand motor)

In all circumstances should you feel the cover getting away from you, hit the “my” button to stop the cover.

Putting the cover on the pool

- Open the lid using the center hole in the lid and have the remote ready.
- Raise the cover from the pit using the down button on the remote. When cover is at a sufficient level out of the pit (1 meter approx.), press (my) to stop the motor.
- Pick up the haul cord and walk to the other end of the pool.
- Press the down button again and lead the cover onto the water. Do not apply excess tension on the rope the motor must be allowed to shed the cover at its own pace. The operator is only required to pull the cover onto the pool at the same rate the motor is shedding the cover from the roller.
- The roller will automatically stop when the cover is fully deployed. If you cover stops short, refer to ‘Resetting Limits’ below.
- Put the haul cord on top of the end of the cover.
- Close lid.

Removing the cover from the pool

- Lift cover onto the concourse - Open the lid using the center hole in the lid and have the remote ready.
- Position yourself at the opposite end of the pool with the remote in your hand.
- Press the Up button on the remote and watch as the cover automatically retracts off the pool onto the roller. If you cover stops short, refer to ‘Resetting Limits’ below.
- Close lid.

Note: In cases of strong winds and inclement weather please ensure your cover is off the pool and secured on the roller.