



Coverroll Ground

WARNING

FOR YOUR SAFETY – This product must be installed and serviced by a qualified pool professional in accordance with applicable national, state, and local codes and standards. Before installing this product, read and follow all warning notices and instructions that accompany this product. Failure to follow warning notices and instructions may result in property damage, personal injury, or death. Improper installation and/or operation may void the warranty and may result in hazards which could cause serious injury or property damage. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.



ATTENTION INSTALLER – This manual contains important information about the installation, operation and safe use of this product. This information should be given to the owner/operator of this equipment.

Section 1. Tools Required



ELECTRIC DRILL
10mm drill bit



PENCIL/PERMANENT
MARKER



17mm SPANNER



TAPE MEASURE



SUITABLE PPE
PPE should be worn
while assembling/
installing product

Section 2. Supplied Parts



2 X END FRAMES
WITH RUBBER FEET







1 X ROLLER TUBE



1 X CRANK HANDLE
WITH M10 BOLT

Section 3. How to Assemble Roller

    1. Identify the Drive (E) and Lazy end (B) of the roller.
2. Determine which side of the roller you would like the handle to be on. This must use the drive end of the roller which has a hole for the handle (E).
3. Check the roller tube is wider than the pool. Ideally 150mm on each side. Please see diagram on following page.
4. Ensure the side of the end frame with the holes in it is closest to the water. (A).
5. Remove bolt and washer at lazy end of the roller tube (B).
6. Thread tube into bushes of end frame (C).
7. Refit bolt and washer, then tighten with 17mm spanner (D).
8. Repeat the above steps to fit end frame to drive end of roller tube (E).
9. Insert crank handle through hole in drive end of tube and tighten bolt onto flat surface of crank handle with 17mm spanner (F).
10. Position the roller so that the end frames are equally spaced from the sides of the pool and align the roller parallel to the end of the pool, so it is just off the water.

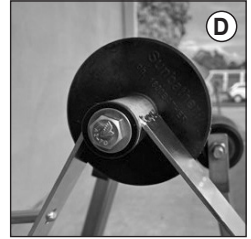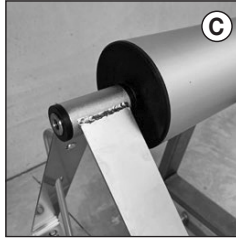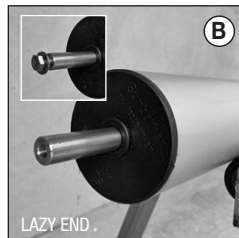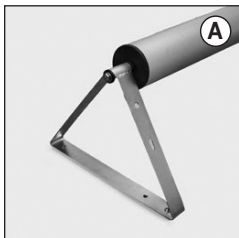

Section 4. Operation Guide

4.1 Putting the cover on the pool

- Remove security strap from around the cover and clip around the leg of the roller for safe keeping.
- Ensure both drop pins are in place to secure the roller (if you have purchased a upgrade kit).
- Pick up the haul cord and walk to the other end of the pool.
- Pull the cover onto the pool.
- Put the haul cord on top of the end of the cover.

4.2 Removing the cover from the pool

- Wind the crank handle to begin winding up the cover. Note if there is a hinge section you need to fold the hinged piece onto the main cover and then under roll not over roll
- Once the cover is completely on the roller, fasten the security strap around the cover to stop it from unwinding/self shedding.


NOTE: As this roller does not have drop pins or lockable castor wheels to fix it's location during operation, please take care in slowing pulling the cover on and off the pool.

In cases of strong winds and inclement weather please ensure your cover is off the pool and secured on the roller.

Section 5. Care & Maintenance


Your roller requires care and maintenance to achieve maximum life and to uphold the warranty. The following are recommended maintenance steps:

 - Do not store chemicals close to rollers.
- Keep all castor wheels clean and free of debris (e.g. hair).
- Rollers can be cleaned down with a cloth and if in an indoor environment sprayed with a clear anti-corrosive spray.
- Do not stand or sit on the roller tube.
- Where rollers are installed or stored indoors, be sure to keep the area well-ventilated.

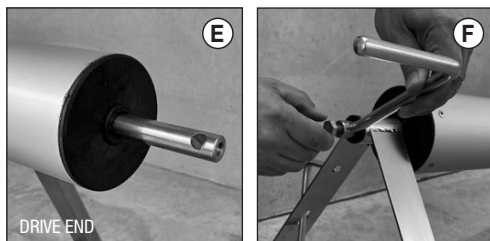

5.1 Coverroll Ground - Install Guide

 
5.1.1 How to Assemble Roller

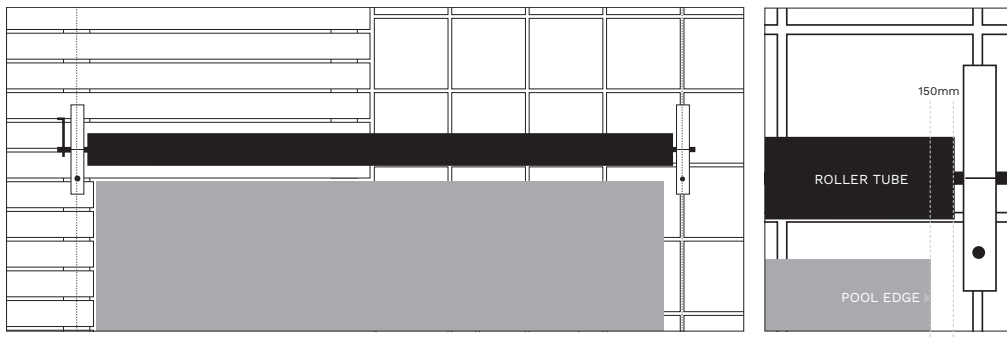

Refer to the relevant guides for cover and attachment installations

TIP: Ideally the roller tube should be positioned as close to the edge of the coping as possible. This positioning helps the cover lift up and directly onto the roller. Setting the roller too far back creates unnecessary drag and can cause the frames to tip forward.

WARRANTY REGISTRATION	Record your equipment details here for quick reference: Model No. : _____ Serial No. : _____
	AUSTRALIA WARRANTY: For full warranty terms and conditions and to register your warranty, visit www.sunbather.com.au/warranty and complete your details. ◀ Or scan the QR code to go directly to the registration page.
	NEW ZEALAND WARRANTY: For full warranty terms and conditions and to register your warranty, visit www.sunbather.com.au/warranty and complete your details. ◀ Or scan the QR code to go directly to the registration page.

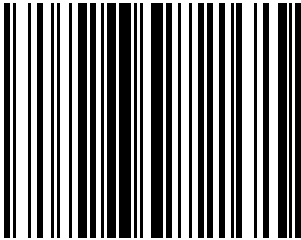 

H0931000