



Coveroll Ground Roller – Roller Upgrade Kit

WARNING

FOR YOUR SAFETY – This product must be installed and serviced by a qualified pool professional in accordance with applicable national, state, and local codes and standards. Before installing this product, read and follow all warning notices and instructions that accompany this product. Failure to follow warning notices and instructions may result in property damage, personal injury, or death. Improper installation and/or operation may void the warranty and may result in hazards which could cause serious injury or property damage. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.



ATTENTION INSTALLER – This manual contains important information about the installation, operation and safe use of this product. This information should be given to the owner/operator of this equipment.

Section 1. Tools Required



ELECTRIC DRILL
10mm drill bit



PENCIL/PERMANENT
MARKER



8 & 17mm
SPANNERS



TAPE MEASURE



SUITABLE PPE
should be worn
while
assembling/
installing product



5mm ALLEN KEY

Section 2. Supplied Parts



2 X DROP PINS



4 X NYLOC NUTS






4 X CASTOR WHEELS





14mm SPANNER

Section 3. Replacing rubber feet with castor wheels

1. Place allen key into bolt head on the under side of the rubber foot, then using an 8mm spanner, undo the dome nut. Then remove dome nut, washer, bolt and rubber foot. Repeat for all 4 rubber feet. (A)
2. Insert castor wheel bolt (already attached to castor wheel) into the hole where rubber foot was removed. Finger tighten nyloc nut onto the bolt with blue side of nut facing away from the caster wheel.
3. Hold the castor wheel in place by using the supplied 14mm spanner on the nut between frame and castor wheel. Tighten nyloc nut using a 17mm spanner. (B)

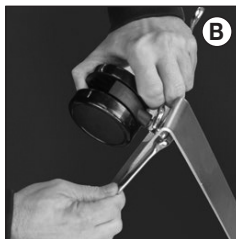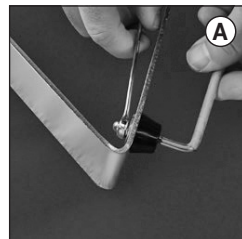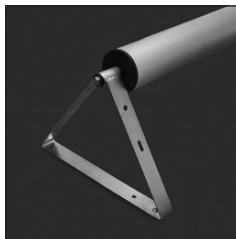

Section 4. How to Drill Pin Position

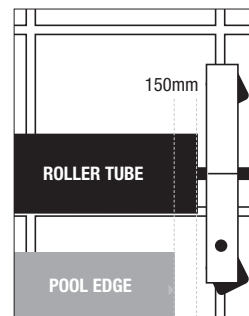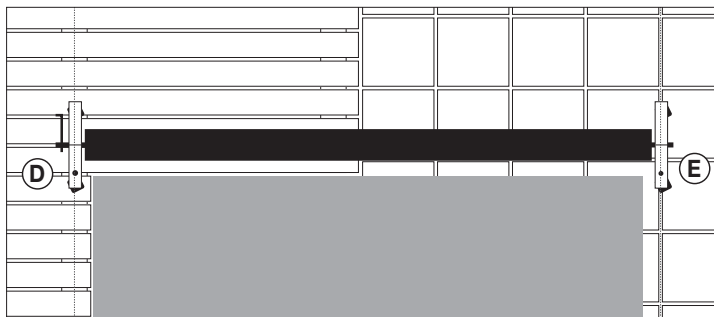


4. Position the roller so that the end frames are equally spaced from the sides of the pool and align the roller parallel to the end of the pool, so it is just off the water. Ensure the drop pin is on the side of the end frame closest to the water.
5. If the roller is on a tiled surface, align the drop pins with grout lines if possible (E). If the roller is on decking, position the roller so that the drop pins align over joists (D). This will prevent the drop pin from falling through the decking board.
6. Mark out the drop pin positions, ideally 200mm from the pool edge, and drill 10mm diameter holes approximately 25mm deep (E). Make sure that you use the appropriate drill type for your substrate.
7. Insert drop pins into drilled holes to secure the roller in place.

TIP: Ideally the roller tube should be positioned as close to the edge of the coping as possible. This positioning helps the cover lift up and directly onto the roller. Setting the roller too far back creates unnecessary drag and can cause the frames to tip forward.

REFER TO THE RELEVANT GUIDES FOR COVER & ATTACHMENT INSTALLATIONS

WARRANTY REGISTRATION	Record your equipment details here for quick reference: Model No. : _____ Serial No. : _____
	AUSTRALIA WARRANTY: For full warranty terms and conditions and to register your warranty, visit www.sunbather.com.au/warranty and complete your details. ◀ Or scan the QR code to go directly to the registration page.
	NEW ZEALAND WARRANTY: For full warranty terms and conditions and to register your warranty, visit www.sunbather.com.au/warranty and complete your details. ◀ Or scan the QR code to go directly to the registration page.

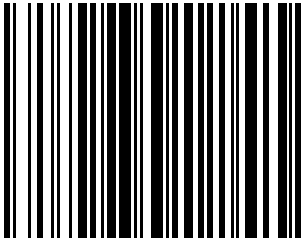

H0931200