

EYELET HINGE KIT

PRODUCT CODE 200215

INSTALLATION GUIDE FOR THE THERMAL COVER

EACH KIT IS SUITABLE FOR A HINGE UP TO 2.4M

Tools Required



PROTECTIVE BACKING
Timber or Plastic



PENCIL/TEXTA



TAPE MEASURE



HAMMER



SUITABLE PPE
*PPE should be worn while
assembling/installing product*

Supplied Parts



METAL PUNCH X 1



4MM CORD X 5



EYELETS X 10

Step 1. Prepare the covers


1. Identify both ends of the thermal cover that will be connected using the eyelet hinge.
2. Ensure that both covers fit appropriately on the pool. Confirm that no further trimming is required before proceeding to the next step.

Step 2. Mark the outer holes A B

3. Using a pencil or texta, clearly mark the locations for the outermost holes on each cover as follows:
 - Measure **35mm** in from the edge of the cover.
 - Measure **75mm** in from the end of the cover.

Step 3. Mark additional holes C

4. Measure the distance between the two outermost holes you've marked.
5. Determine the number of additional holes needed, ensuring they are evenly spaced, no more than **600mm** apart, and **35mm** from the cover's joining edge.
6. Mark the hole locations on both covers, ensuring they are parallel for consistent alignment.

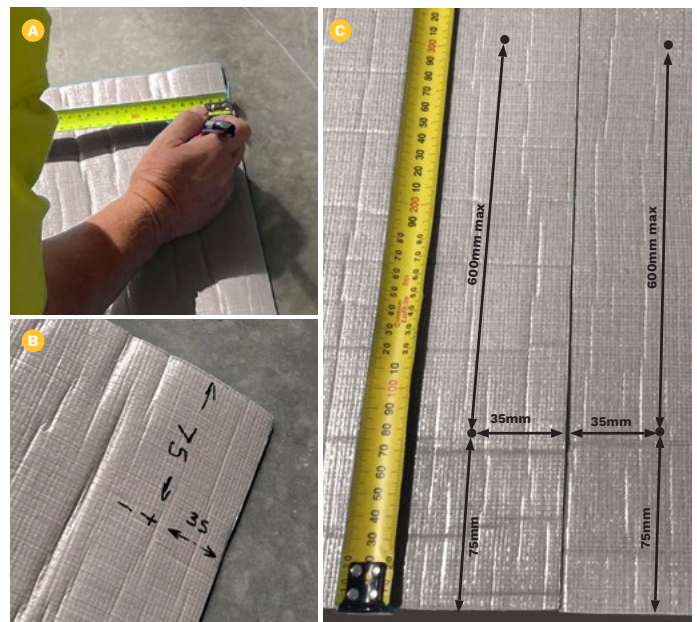

Step 4. Punch the holes D E F


7. Place a piece of protective backing (such as timber or plastic) underneath the cover to prevent damage to paving or decking.
8. Then take the metal punch supplied and using a hammer, tap the bevelled end of the punch into the marks you previously made on the cover.

Step 5. Attach the eyelet

9. Place the male half (flange side) of the blue plastic hexagon eyelet through the holes from the top side of the cover. Fold the edge of the cover over to expose the underside G H.
10. Snap the female half of the eyelet onto the male half, and gently tap them together with a hammer until secure I.
11. Repeat for all holes.

Step 6. Attach cords to create the hinge

12. Fold the 2 pieces of thermal cover together, so that the male sides of the eyelets are on the inside and the female sides are facing outwards J.
13. Thread a 4mm cord through the opposing eyelets and secure it with a knot, ensuring the loop is not too small K.
14. Repeat this process for all eyelets, making sure each loop is the same length to create a consistent and secure hinge for the pool cover.
15. These steps should leave the knot position underneath the cover, hidden from view.
(See front cover image.)

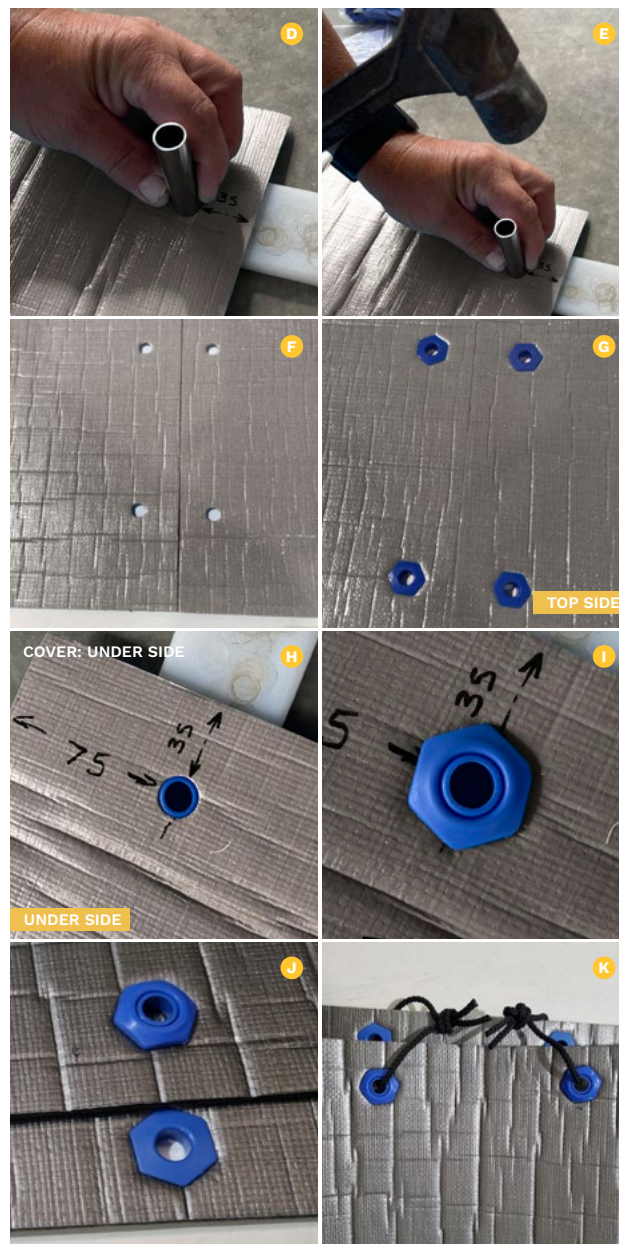

COVERROLL SUPPORT
GUIDES & BROCHURES



sbtradesupport.au@fluidra.com | sunbather.com.au



1800 228 437